


Connects Nokia 3310

PIN	LCD	PIN	IC1
1	VCC	7	VCC
2	SCLK	19	PB5
3	SDIN	18	PB4
4	D/C	17	PB3
5	SCE	16	PB2
6	GND	8	GND
7	VOUT	NC	- El.cond. +1uF
8	RST	15	PB1 + El.cond. -1uF

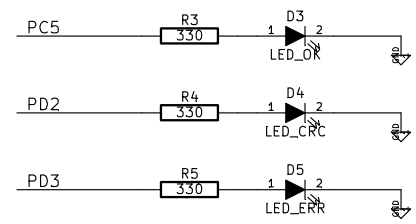

BUTTONS

PIN	IC1	NAME
23	PC0	UP
24	PC1	DOWN
25	PC2	OK
26	PC3	LEFT
27	PC4	RIGHT

All Pin 2 buttons to GND

